

Part #	Description	# Required	Part #	Description	# Required
1	Output Shaft	1	35	Bearing Retaining Plate Screw M4 x 10	2
2	Tube Seal	1	36	Armature	1
3	Flat key A6x12	1	37	Shield Ring	1
4	Retaining Ring 47	1	38	Self Tapping Screw 4.8 x 70	2
5	Dust Cover	1	39	Stator	1
6	6204 Bearing	1	40	Motor Cover	1
7	Shield Ring For Shaft 20	1	41	Brush Holder Assembly	2
8	Gear Box 1	1	42	Self Tapping Screw ST 4.2 x 13	4
9	Rubber Sealing Ring 20x36x7	1	43	Self Tapping Screw ST 4.2 x 13	2
10	6004 Bearing	1	44	Brush (7 x 13 x 19)	2
11	4# Gear	1	45	Coil Spring for Brush	2
12	Shield Ring For Shaft 19	1	46	Brush Cover	2
13	Water Hose Assembly	1	47	Self Tapping Screw M 4 x 6	2
14	Rubber Washer 10 x 16 x 2	1	48	Flat Washer 6	4
15	6000 Bearing (Blue Cover)	1	49	Spring Washer 6	4
16	Locking Nut M 14 x 1.5	1	50	Allen Head Bolt M 6 x 60	4
17	Disc Spring	2	51	Rear Cover	1
18	Pressing Ring	2	52	Self Tapping Screw ST 4.2 x 16	4
19	Friction Shim	2	53	Shoulder Push Support	1
20	#2 Gear	1	54	Self Tapping Screw ST 4.2 x 30	4
21	Copper Cover	1	55	Shoulder Support Cushion	1
22	#3 Gear Shaft	1	56	Self Tapping Screw ST 4.8 x 25	1
23	Rubber Washer #2	1	57	Overload Protector 8A	1
24	Adjusting Washer	1	58	10A Trigger Switch	1
25	Right Angle Connector	1	59	Circuit Board	1
26	Water Switch	1	60	Sleeve for power cord	1
27	Side Handle	1	61	Power Cord	1
28	Rubber O-Ring 94 x 3 x 100	1	62	Right Handle Cover	1
29	Axial Sleeve	1	63	Left Handle Cover	1
30	Locating Pin 4 x 17	1	64	Self Tapping Screw ST 4.2 x 19	4
31	Mid Cover	1	65	6000 Bearing (Black Cover)	2
31	Washer 18 x 0.3 x 34.8	1	66	GFCI	1
33	6202 Bearing	1	67	Capacitor	1
34	Bearing Retaining Plate	1			